



# Installation & Operation



## Hand-Held Remote

### Warranty

The manufacturer warrants this product to be free from defects in materials and workmanship for a period of 60 days.

**Canadian Heating Products Inc.**

Surrey, BC V3W 2V6

**Montigo Del Ray Corp.**

Ferndale, WA 98248

# Installation

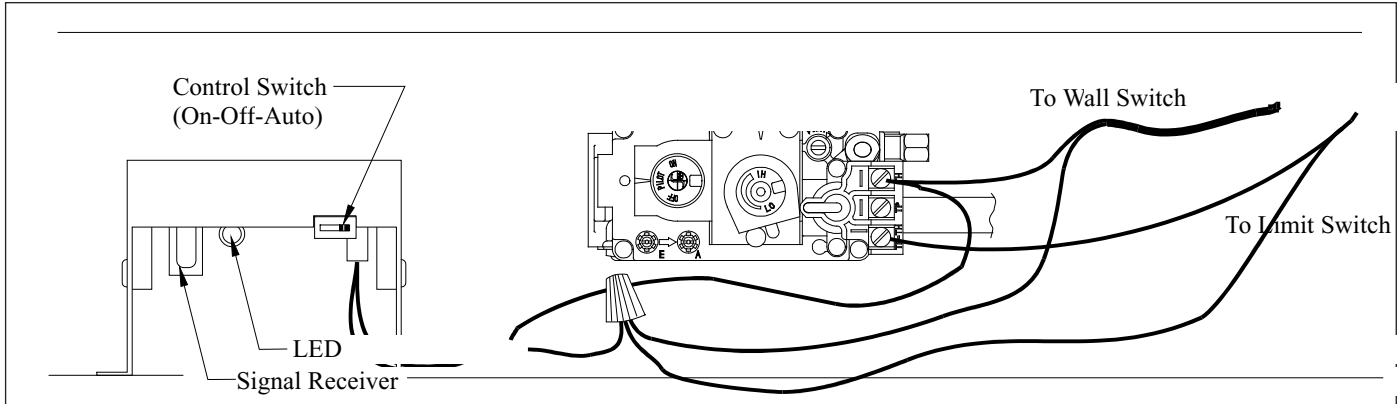


Figure 1. Front view of the fireplace control compartment, showing the control switch and the wiring for the remote receiver.

## CAUTIONS:

- Turn the fireplace off before installing the remote control.

## General Information

This remote control may be installed on any Montigo fireplace which uses a millivolt control valve.

## Parts List

- 1 - remote control
- 1 - sensor assembly

## Installation

- Install 2 - 'AAA' batteries in the remote control. Factory has installed 4 - 'AAA' batteries in the sensor assembly.

### Battery Replacement - Remote Receiver

- To replace the batteries, remove the two screws on each side of the assembly.
- Pull the control board down and replace the batteries mounted in the top of the board. Make sure to position the batteries as indicated on the battery holder.
- Reposition the control board and replace the four screws.

- Remove the lower horizontal trims.
- Place the remote receiver on the bottom of the fireplace, to the extreme right or left, (where the temperature is lowest). Choose a location which provides a clear path for the remote control's infrared signal. The remote receiver may be fastened to the bottom of the fireplace if you wish.
- Connect the remote receiver's two black wires in parallel to the wall switch circuit, as shown in Figure 1.

- Turn the wall switch to its 'OFF' position. Turn the control switch on the remote receiver to 'MANUAL ON' (left position). The fireplace will start. Turn the control switch to 'OFF' (middle position). The fireplace will turn off.
- Turn the control switch to 'AUTO'. (right position) The LED on the remote receiver will come on momentarily. Step back from the fireplace and press the 'Power' button on the hand-held remote. The LED will come on again, and the fireplace will start. To turn the fireplace off, wait 15 seconds and the press the 'Power' button again.

## Operation

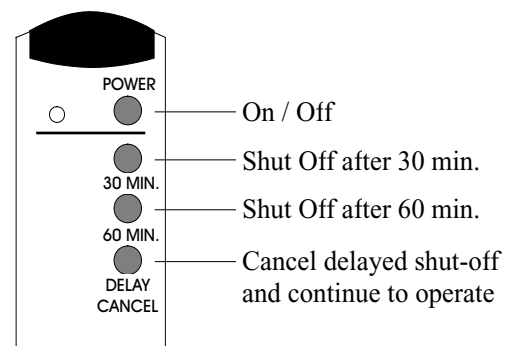


Figure 3. Remote control operation.

### Note:

A pause period is built into the remote control to prevent rapid On/Off cycling of the fireplace. However, be sure to keep the remote control out of reach of small children.