Installation & Maintenance Manual





PVHEX47-200

4/7 EXTERNAL WALL MOUNT POWER VENT







- The installation of this fireplace must be done by a qualified and certified gas appliance installer.
- Check local codes and read all instructions prior to installation.

A WARNING:

FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
 - · Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Leave the building immediately.
 - Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas fitter.

NOTICE

Installer: Leave this manual with the appliance. **Consumer:** Retain this manual for suture reference.

A CAUTION

Installation and service must be performed by a qualified installer, service agency or the gas fitter.

A DANGER

Read and understand this manual. Improper installation, adjustment, alteration, service or maintenance can cause serious injury, property damage or even death. For assistance or additional information consult a qualified installer, service agency or the gas supplier.

A WARNING

Some materials used in the manufacturing process of this product can expose you to Benzene which is known in the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

Safety Alert Key

A DANGER

Indicates a hazardous situation which, if not avoided, WILL result in death or serious injury or property damage.

A CAUTION

Indicates a hazardous situation which, if not avoided, WILL result in minor or moderate injury.

A WARNING

Indicates a hazardous situation which, if not avoided, COULD result in death or serious injury or property damage.

NOTICE

Indicates practices that are important, but not related to personal injury.

Introduction

Congratulations on your purchase of a Montigo Fireplace.

This installation guide covers installation of the Roof mount Power Vent System only. This system is designed to allow installation of gas fireplaces that cannot be done with a standard Direct Vent gas fireplace installation. Only for use on DelRay, Distinction, Divine, Phenom, that uses the 4/7 and 5/8 venting system.

ONLY USE WITH APPROVED FIREPLACES - see fireplace installation manual.

Read through the fireplace's installation & maintenance manual, as it must also be adhered to.

Power Cord Harnesses:

- EPVH10 10 foot power cord and harness
- EPVH20 20 foot power cord and harness
- EPVH40 40 foot power cord and harness
- EPVH50 50 foot power cord and harness
- EPVH80 80 foot power cord and harness
- EPVH100 -100 foot power cord and harness

EPVH60 - 60 foot power cord and harness

Motor Model Number: M2E068DF

Manufacturer: EBM Germany

Voltage: 110 Volts

Frequency: 50 Hz

Current draw: 1.41 Amp

Power consumption: 155 W

Speed: 2850 RPM

Maximum air movement: 400 CFM at zero restriction

Minimum air movement: 50CFM at 2.2" WC
Protection: Thermal switch
Bearings: Ball bearings

Figure 1 PV Specifications

IMPORTANT:

For vent configurations and power vent locations, refer to fireplace manual.

Section A: Before You Begin

IMPORTANT MESSAGE: SAVE THESE INSTRUCTIONS

Minimum clearances 1" from vent to all combustible materials must be maintained. Clearances listed in the fireplace's Installation Operation and Maintenance Instructions supersede this number.

Selecting and Installing the Fireplace

When selecting a gas fireplace for use with the External Power Vent System, take into consideration the various requirements and limitations in the venting installation section.

Models Equipped with Electronic Ignition

It is recommended that this system be used with a gas fireplace equipped with a Hot Surface Ignition System. Because there is not a pilot in this system, there is more flexibilty on venting requirements. For example downward vertical vet runs are possible with an HSI system, as outlined in the Venting Section.

NOTICE

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water

NOTICE

Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition

CAUTION

When cold air enters the warmer building interior, primarily at the air intake end, condensation may occur on the exterior of the flex pipe. To limit this condensation, install insulation over the last twenty feet of flex pipe. Also, by sloping the last 20'-0" feet of flex pipe downward toward the exterior of the building, elimination of most of the condensation problems should occur. Ensure the termination is securely fastened, and sealed to the flex pipe. Fasten the termination to exterior of the building with water tight sealant and the appropriate fasteners.

Contents

Safety Alert Key	2
Introduction	2
Section A: Before You Begin	
Section 1: Dimensions	4
PVHEX47-200 Product Dimensions	
Section 2: Installing the power vent	5
Venting Installation	
Multi-Elbow Installations	
Downward Vertical Venting	5
Installing the Power Vent	6
Wiring Installation	7
Wiring Installation	9
Wiring Installation	10
Appendix A: Venting Terminations	11
Appendix B: Warranty	12
Appendix B: Warranty Continued	13
Appendix C: Amendment	14
(Gas Fireplace / Equipment sold in the State of Ma	assachusetts)

NOTICE

Clothing or other flammable material should not be placed on or near the appliance

NOTICE

Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person. More frequent cleaning might be required due to excessive lint from carpeting, bedding material, etc. It is imperative that control compartments, burners, and circulating air passageways of the appliance be kept clean

Section 1: Dimensions

PVHEX47-200 Product Dimensions

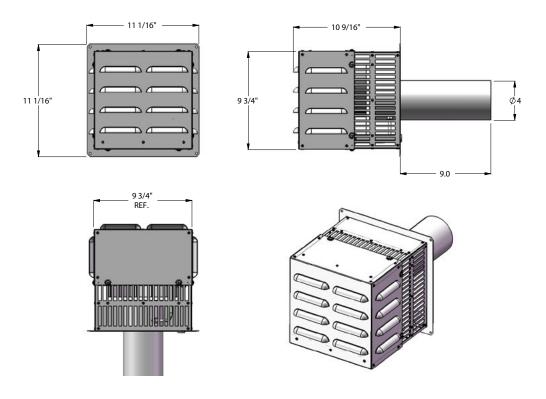


Figure 2.d PVHEX47-200 Unit dimensions (Tolerance \pm 1%").

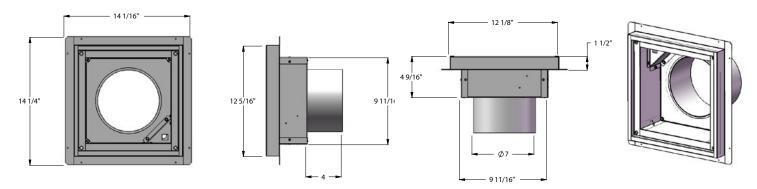


Figure 2.dd Mounting frame dimensions (Tolerance $\pm \%$ ").

Section 2: Installing the power vent

Venting Installation

External Power Vent System must be used with a gas fireplace that is equipped with electronic ignition system. When installing the venting, the installation must adhere to the Vent Installation Section in the fireplace's Installation Operation and Maintenance Instructions, as well as the following guidelines:

- Ensure that the planned termination location is acceptable as shown in Appendix A.
- · Maximum allowed vent run is 80 feet.


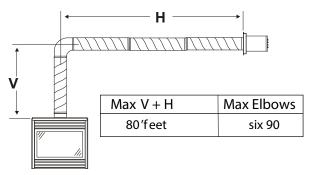



Figure 3.a Typical Venting Installations.

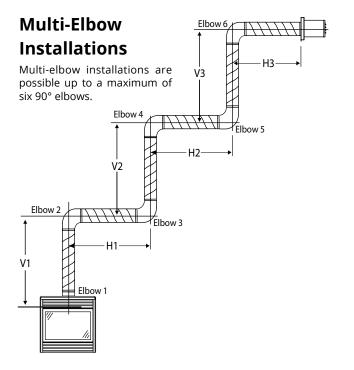

Max V1 + H1 + V2 + H2 + V3 + H3	Max Elbows
80' feet	six 90

Downward Vertical Venting

Downward venting installations are only possible with gas fireplaces equipped with electronic ignition system.

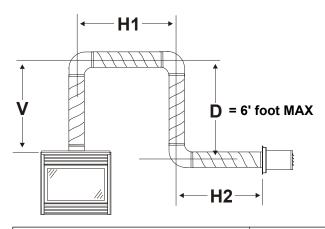

Max V1 + H1 + D + H2	Max Elbows
40'feet	six 90

NOTE: Vent run for downward venting installations allows a maximum of 40 feet including downward vent section. Maximum downward vent section allowed is 6 feet.

Installing the Power Vent


Selecting A Termination Location

Before installing the termination, ensure that the proper air flow restrictor is installed as shown, and check to ensure the planned termination location is acceptable. For a detailed illustration of allowed termination locations, see Appendix A.

Installing the External PV Termination

Step 1.Construct a frame for the termination opening to

12½" x 12½"

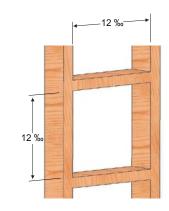

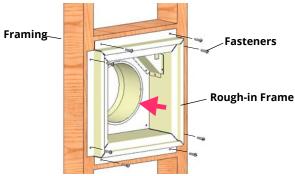


Figure 4.a Framing the Opening for Power Vent

Step 2: Insert the Power Vent Rough-in Box as shown in Figure 4.a. Fasten the Box securely in place with Screws or nails, Figure 4.a. Apply exterior sheathing and finishing if required. (Figure 4.b).

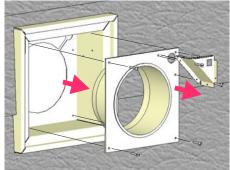


Figure 4.b Installation of Rough-in Kit

Step 3: Next, remove the bottom collar and conduit mounting frame as shown Figure 4.b. (Place removed hardware in a handy location for re-assembly).

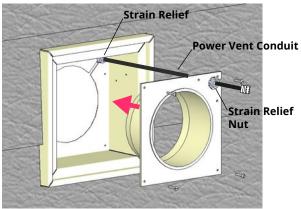


Figure 4.c Installation of Power Vent Conduit

Step 4: Insert the conduit from the Power Vent Module into the roughin frame through the two top right entry holes. Remove the nut from the supplied strain relief and place as shown, Figure 4.c.

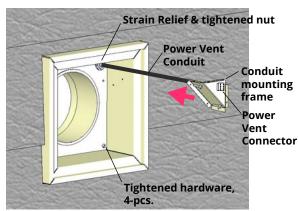


Figure 4.d Installing Conduit connector & conduit mounting frame

Step 5: Securely fasten bottom Collar pan into the Rough-inframe using the existing hardware, (4-pcs). Tighten Strain Relief nut onto Strain relief.

Step 6: Pull Power Vent Connector, (from behind) half-way through supplied hole in conduit mounting frame, and snap into place, (notches in two plastic wing clips. Orientation not critical).

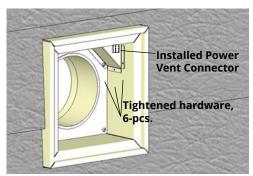


Figure 4.e Assembled Rough-in Kit

Step 7: Fasten Conduit mounting frame into place using existing hardware, (6-pcs). (Coil conduit in behind cover.)

Step 8: Install the Power Vent Power / communication harness. Hold the Power Vent in close proximity of the assembled Rough-in Kit, and plug in the Power Vent communication / Power Cord. (Note the direction and orientation of the pins inside the Power Vent connector, snap together). (Figure 4.e).

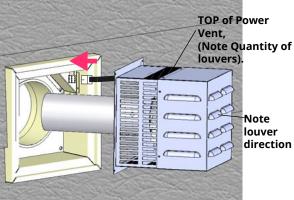
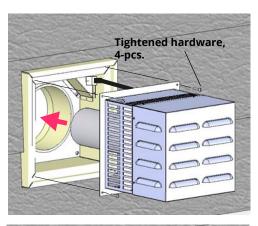


Figure 4.f Installation of Power Vent communication harness

Step 9: Install the Power Vent. Place the Power Vent into the Rough-in frame, aligning the Power Vent into final position. Ensure the Harness is placed down in the Rough-in box when placing the Power Vent. (Secure the Power Vent in Place with the supplied hardware).




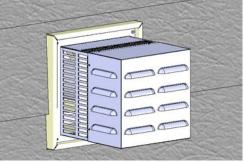


Figure 4.g Completed Installation of Power Vent

Wiring Installation

Connect the wiring to the external power vent termination as outlined in the previous section, and connect the wiring to the fireplace as outlined in the schematic below. Ensure that the proper clearances are maintained for the wiring and conduit.

 When installing the wiring it must never run above the vent run and it must be at least 1" clear of all venting.

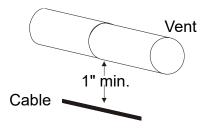

WARNING

Montigo will not be held responsible for any water damage that may occur from not installing the equipment as specified by this document.

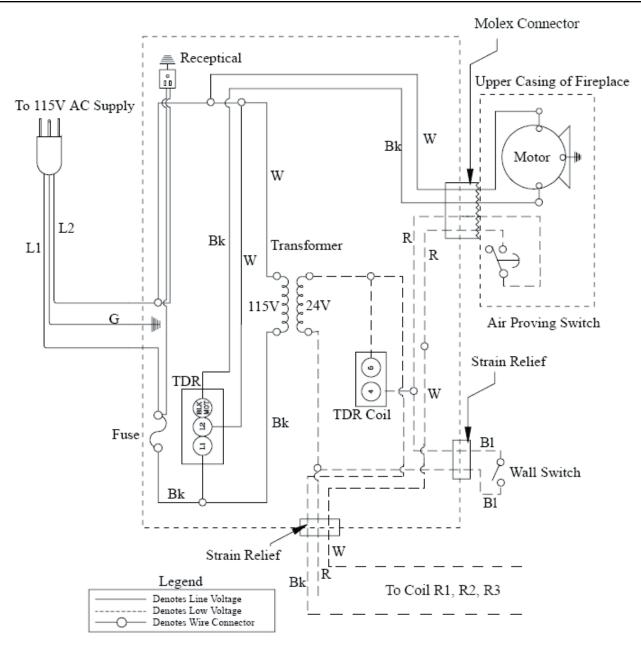


Figure W.a Standard ECB006 Wiring Schematic for Power Vent System.

WARNING

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.


Note:

Connections exiting Post Purge control box to Custom fireplace may not be as shown. Post Purge schematic is shown in a Typical installation configuration. Please refer to the Custom schematics supplied with fireplace, electronic, or other means for connection configuration to Custom C-View, or BF-Series fireplace.

Wiring Installation

Connect the wiring to the external power vent termination as outlined in the previous section, and connect the wiring to the fireplace as outlined in the schematic below. Ensure that the proper clearances are maintained for the wiring and conduit.

• When installing the wiring it must never run above the vent run and it must be at least 1" clear of all venting.

 

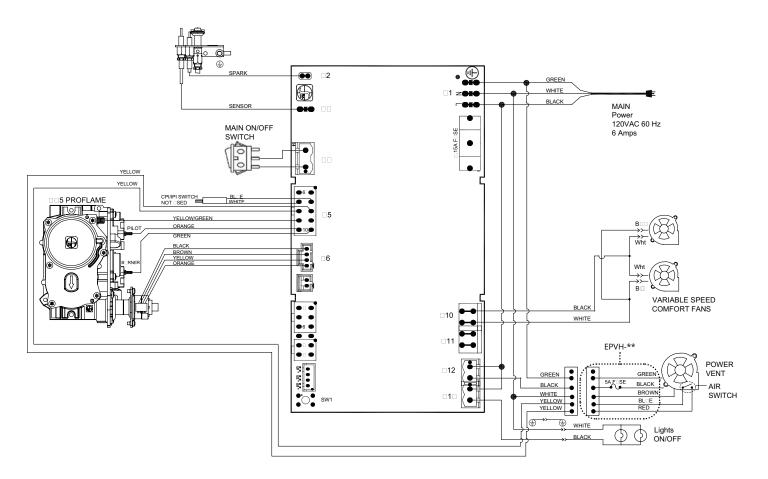


Figure W.b Wiring schematic for Distinction full load, DelRay full load, P38,P42 and P52 with power vent. (ECA045PC)


WARNING

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Wiring Installation

Connect the wiring to the external power vent termination as outlined in the previous section, and connect the wiring to the fireplace as outlined in the schematic below. Ensure that the proper clearances are maintained for the wiring and conduit.

• When installing the wiring it must never run above the vent run and it must be at least 1" clear of all venting.

 


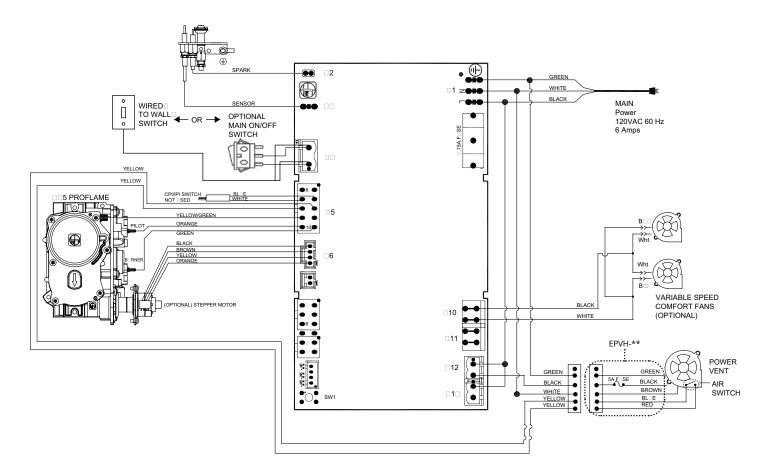


Figure W.b Wiring schematic for DL,H,L and PL Series (ECA062PV)

WARNING

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Appendix A: Venting Terminations

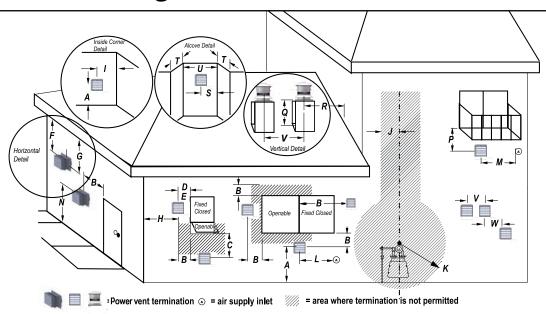

	Location	Canada*	USA**
Α	clearance to the termination frame above grade, veranda, porch, deck, or balcony	30 inches	30 inches
В	clearance to top of doors or operable windows	12 inches	12 inches
С	clearance to sides or bottom of door or operable windows	4 feet	4 feet
D	clearance to permanently closed window when installed with approved glass penetration termination	0	0
E	clearance to permanently closed window Recommended to prevent condensation	30 inches	30 inches
F	clearance to ventilated soffit located within a horizontal distance to 24 inches from centerline of termination	22 inches	22 inches
G	clearance to unventilated soffit	30 inches	30 inches
Н	clearance to outside corner	30 inches	30 inches
ı	clearance to inside corner	30 inches	30 inches
J	clearance to each side of the vertical centerline of a metre or regulatory assembly to a maximum vertical distance of 15ft	3 feet	3 feet
К	clearance to service regulator vent outlet	3 feet	3 feet
L	clearance to non mechanical air supply inlet to the building or combustion air inlet to other appliance (<= 100.000 BTU/H (30 KW)	12 inches	4 feet
L	clearance to non mechanical air supply inlet to the building or combustion air inlet to other appliance for appliance > 100.000 BTU/H (30 KW)	6 feet	4 feet
М	clearance to forced air supply inlet	6 feet	3 feet above air inlet
N+	clearance above paved sidewalk or paved driveway located on public property	7 feet	7 feet
P++	clearance under veranda, porch, deck, or balcony	30 inches	30 inches
Q	clearance above roof	2 feet	2 feet
R	clearance to adjacent walls and neighboring buildings	30 inches	30 inches
s	clearance from corner in recessed location	30 inches	30 inches
Т	Maximum depth of recessed location	48 inches	48 inches
U	Maximum width for back wall of recessed location	60 inches	60 inches
٧	Horizontal clearance between two terminations that are level	30 inches	30 inches
w	Horizontal clearance (centre to centre) between two terminations that are not level	30 inches	30 inches

^{*} Based on CGA B149.1 Natural Gas and Propane installation code. Local codes may vary, please check with local regulatory agency.

^{**} Based on ANSI Z223.1/NFPA 54 National Fuel Gas Code. Local codes may vary, please check with local regulatory agency.

⁺ A vent shall not terminate directly above a sidewalk or paved driveway which is located between two single family dwellings and serve both dwellings.

⁺⁺ Only permitted if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

Appendix B: Warranty

MONTIGO RESIDENTIAL WARRANTY PROGRAM

Canadian Heating Products Inc. and/or Montigo DelRay Corp (collectively referred to herein as "The Companies"), warrants the Montigo gas appliance (referred to herein as 'the appliance') to be free from defects in materials and workmanship at the time of manufacture. The gas appliance and related components are further subject to the terms and conditions set forth below.

This warranty covers the following Montigo product series: Distinction, H, I, L, Linear P and PL, R, RP, Mahana and DelRay

Component	Coverage Period	Labor Coverage
Firebox, heat exchanger	15 years	1 year
Main burner	15 years	1 year
Gas control valve and related control components (pilot assembly, spark electrode flame sensors, thermopile)	1 year	1 year
Electrical components (internal blowers, ignition control module, wiring, switches, remote control systems, blower control module, accent bulbs)	1 year	1 year
Firebox media (logset, glass beads, river rocks)	1 year	1 year
Glass (thermal breakage)	1 year	1 year
Plated, painted finishes (including interior reflective glass)*	1 year	1 year
Refractory lining	1 year	1 year
Mesh/Glass safety barriers	1 year	1 year
Power Vent Control box	1 year	1 year
Montigo Venting (excluding terminations)	15 years	1 year

^{*} Exterior painted surfaces exempt

QUALIFICATIONS TO THE WARRANTY

This Warranty only covers gas appliances installed in the United States or Canada.

To receive the benefits of this warranty, the appliance must be purchased, installed and serviced annually by a dealer authorized by The Companies for the warranty to be valid.

The gas appliance must be installed by a licensed professional in accordance with The Companies' installation instructions and local building codes. The warranty on the appliance covers only components manufactured by The Companies. The use of components manufactured or supplied by other manufacturers and used in conjunction with the appliance could create serious safety hazards, may result in the denial of certification by recognized national safety agencies and could violate local building codes. Such use may untimely void this warranty. This warranty does not cover any damages occurring from the use of any components not manufactured or supplied by The Companies.

The appliance must be subjected to normal use. The appliance is designed to burn natural gas (NG) or liquefied petroleum (LP) only. Burning conventional fireplace fuels such as wood, coal or any other solid fuel will cause damage to the appliance, produce excessive temperatures will result in a fire hazard and void all

warranties. This warranty is transferable. The appliance must remain in its original place of installation to be valid.

If the components of the appliance covered by this warranty are found to be defective within the time frame stated (see The Companies investigation of claims), The Companies will, at its option, replace or repair defective components of the appliance manufactured by The Companies at no charge and will also pay for labor costs (in accordance with schedule) incurred in replacing or repairing components. If repair or replacement is not commercially practical, The Companies will, at its sole discretion, fully discharge all obligations under the warranty by refunding the verified dealer purchase price of the appliance, excluding the cost of labor unless the labor is covered by the terms of the warranty.

This warranty covers only parts and labor as provided above. In no case shall the companies be responsible for materials, components or construction, which are not manufactured or supplied by The Companies, or for the labor necessary to install, repair or remove such materials, components or construction. All replacement or repair components will be shipped F.O.B. from the nearest Company factory.

LIMITATION ON LIABILITY

It is agreed and understood that The Companies sole obligation, and purchaser's exclusive remedy under this warranty, under any other warranty, expressed or implied, or in contract, tort or otherwise, shall be limited to repair, replacement or refund as specified above. The opinion of The Companies with respect to these matters shall be final.

In no event shall The Companies be responsible for any incidental or consequential damages caused by (but not limited to) improper installation, installation by an unqualified or unauthorized installer, accident, lack of regular maintenance, user error, abuse, misuse, Acts of God, power surges, floods, natural disasters, force majeure, defects in its appliance whether such damage occurs or is discovered before or after replacement or repair, and whether or not such damage is caused by The Companies negligence. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The duration of any implied warranty with respect to the appliance is limited to the duration of the foregoing warranty. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you.

Appendix B: Warranty Continued

EXCLUSIONS TO WARRANTY

Corrosion or rust of any kind due to a lack of maintenance, inadequate combustion air or improper venting and corrosive chemicals/environments, expansion and contraction of metals or minor movements of components causing noise are not covered by this warranty.

Willful misconduct (i.e. use of the appliance with problems known to the purchaser and causing further damages), including unauthorized or self-performed 'fixing' or exploration of the appliance's internal workings will void the warranty.

Appliances on which the serial number has been altered, defaced, removed or made illegible will void the warranty.

Costs incurred for diagnosis, service work, shipping and handling of defective or replacement parts are not covered under this warranty.

The published warranties are not applicable for any equipment manufactured by The Companies that has been sold direct to the consumer via internet or auction websites. The Companies do not endorse, approve or certify any online sale of its products through auction websites, online retailers or any other method of online sales direct to consumers.

INVESTIGATION OF CLAIMS AGAINST WARRANTY

The Companies reserve the right to investigate any and all claims against this warranty and decide upon method of settlement.

The Companies are not responsible for work done without written consent of The Companies.

The Companies shall in no event be responsible for any warranty work done without first obtaining the Companies written consent.

The Companies employees and dealers have no authority to make any warranties to neither alter this warranty nor authorize any remedies in addition to or inconsistent with those stated within this warranty.

IF WARRANTY SERVICE IS NEEDED

To make a claim under this warranty, contact your installing dealer or contractor. The installing dealer is responsible for providing service and will contact the companies to initiate warranted parts replacements. In the event the installing dealer is unavailable, contact your nearest authorized Montigo dealer (www.Montigo.com) or contact Montigo direct at techsupport@ montigo.com. Ensure you have your sales receipt and the model and serial number of your appliance.

DO NOT ATTEMPT TO DO ANY SERVICE WORK YOURSELF

If you cannot locate the installing dealer, or nearest dealer/distributor, you must notify The Companies in writing.

USA Offices

6955 Salashan Parkway Ferndale WA, 98248 techsupport@montigo.com

Canadian Offices

27342 Gloucester Way Langley, BC V4W 4A1 techsupport@montigo.com

The terms and conditions of this warranty may be altered or amended from time to time without prior notice.

WARRANTY PERIOD: Warranty coverage begins on the date of original purchase. In the case of new construction, warranty coverage begins on the date of first occupancy of the dwelling or six months after the sale of the product by an independent, authorized Company dealer/ distributor, whichever occurs earlier.

Appendix C: Amendment

(Gas Fireplace / Equipment sold in the State of Massachusetts) 5.08: Modifications to NFPA-54, Chapter 10

- (1) Revise NFPA-54 section 10.5.4.2 by adding a second exception as follows:
 - Existing chimneys shall be permitted to have their use continued when a gas conversion burner is installed, and shall be equipped with a manually reset device that will automatically shut off the gas to the burner in the event of a sustained back-draft.
- (2) Revise 10.8.3 by adding the following additional requirements:
 - (a) For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:
- 1. INSTALLATION OF CARBON MONOXIDE DETECTORS. At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gas fitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors
 - a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery backup may be installed on the next adjacent floor level.
 - b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.
- APPROVED CARBON MONOXIDE DETECTORS. Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2042 listed and IAS certified.
- 3. SIGNAGE. A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".

- 4. INSPECTION. The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.
 - (b) EXEMPTIONS: The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:
- The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
- Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.
 - (c) MANUFACTURER REQUIREMENTS GAS EQUIPMENT VENTING SYSTEM PROVIDED. When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:
 - 1. Detailed instructions for the installation of the venting system design or the venting system components; and
 - A complete parts list for the venting system design or venting system.
 - (d) MANUFACTURER REQUIREMENTS GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED. When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:
 - The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
 - The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.
 - (e) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.
- (3) After NFPA-54 section 10.10.4.2 add a new section 10.10.4.3 as follows:

When more than four gas appliances are to be vented through a common gas vent or common horizontal vent manifold, a plan of the proposed vent installation shall be submitted to the Inspector and the serving gas supplier for review and approval.

Extraction from: Massachusetts Rules and Regulations

5.00: Amendments To 2002 Edition Of ANSI Z223.1-NFPA-54

Notes

Installation & Maintenance Manual

PVHEX47-200

External Wall Mount Power Vent