





DRFK1 DELRAY FAN KIT INSTALLATION

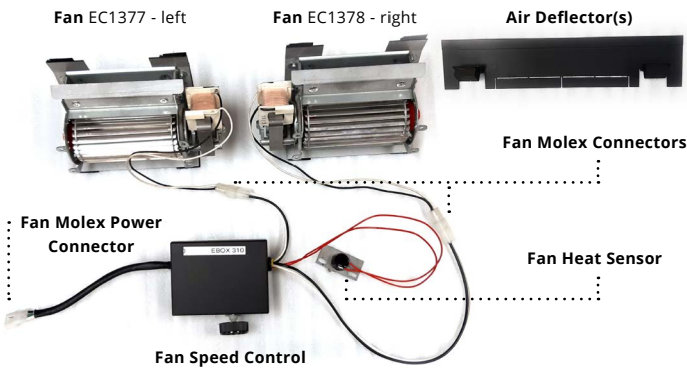

1 Remove two (2) screws securing the pilot cover. Burner can now be removed by pulling upwards.




2 The ten (10) screws that retain the media tray can now be removed. Remove the two media tray(s) as shown below.

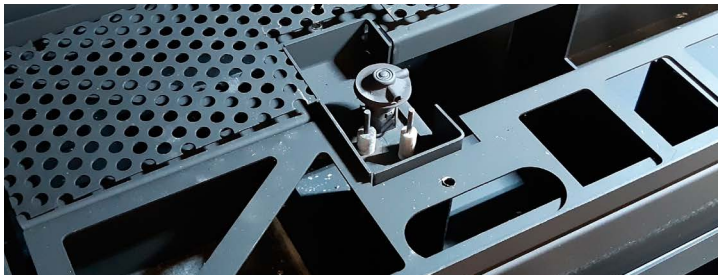

Assembly

3 Remove the Media tray deck being secured with four (4) #8 tek screws.

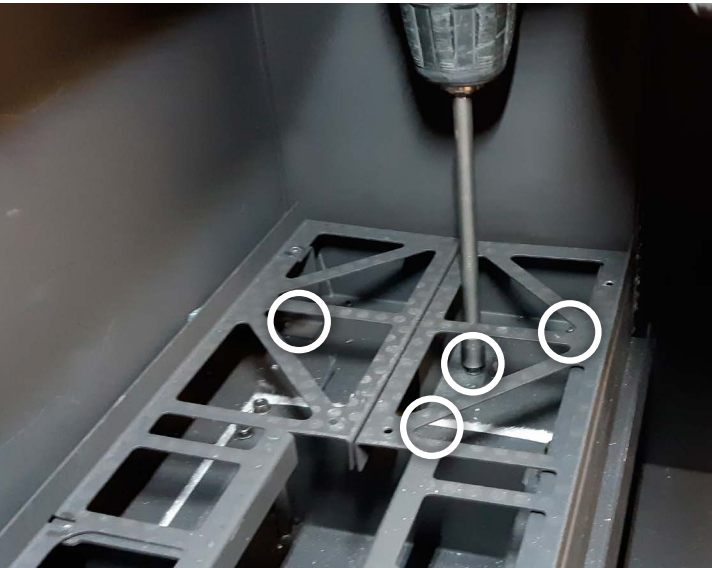


4 Remove the firebox pan being secured with twenty (20) #8 tek screws. The pan can now be pulled forward and gently rested on the front lip of the fireplace frame.



⚠ WARNING

Take care when manoeuvring burner pan to prevent damaging the gas flex line and pilot wires. Removing the flex hose requires replacement

5 Remove adhesive backing from fan brackets. Place fans against the back wall of the firebox next to the posts as shown. Ensure the motors are facing in.

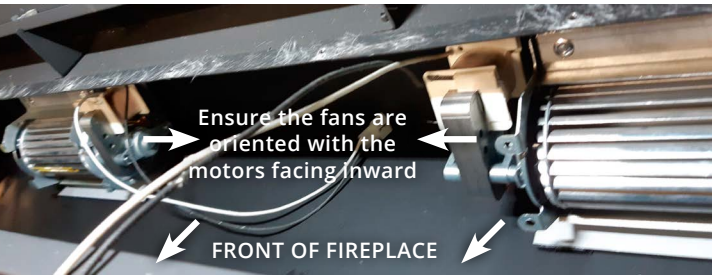


6 Connect the two (2) fans to the manual fan speed control box. The fan speed control can be connected to the existing harness.



7 Remove adhesive backing from fan speed control, attach to the inner front wall of fireplace. Heat sensor can be attached to the bottom of the burner pan.



8 Install the three (3) air deflectors with attached magnets to the fireplace door, taking note of spaces for door latches.

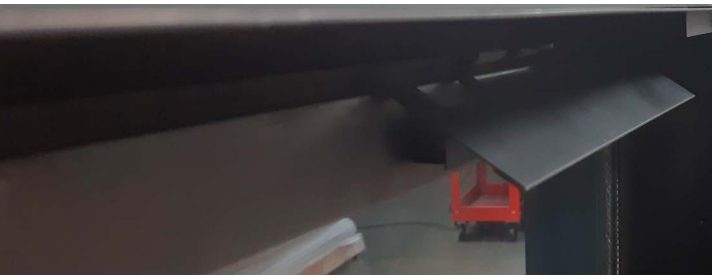

9 Re-install Pan, Deck, media tray and all burner and pilot related parts. Ensure all screws are accounted for.

